

## TROUBLESHOOTING

Problem	Possible Causes
No picture, no sound	<ul style="list-style-type: none"> <li>• Improper connection with 12v power adapter.</li> <li>• Use of unauthorized power supply</li> <li>• Monitor is in OFF position</li> </ul>
No picture	<ul style="list-style-type: none"> <li>• Check whether AV cable is securely plugged in</li> </ul>
No sound	<ul style="list-style-type: none"> <li>• Check whether audio connector is secure</li> <li>• Check whether the sound volume is turned off or down</li> </ul>
Dark picture	<ul style="list-style-type: none"> <li>• Ensure that bright and contrast settings are properly adjusted</li> <li>• Ensure monitor is warm enough</li> </ul>
No color	<ul style="list-style-type: none"> <li>• Ensure color settings are properly adjusted in menu</li> </ul>
Upside down or lateral inverted picture	<ul style="list-style-type: none"> <li>• Check horizontal/vertical adjustment on remote</li> </ul>
Event Triggers not activating (i.e. No picture during triggered event)	<ul style="list-style-type: none"> <li>• Event trigger is not securely connected</li> </ul>
Remote Controller Fault	<ul style="list-style-type: none"> <li>• Battery may be dead or improperly installed: replacement battery Model:CR2025,3V</li> </ul>
	<ul style="list-style-type: none"> <li>• Remote controller is not pointed in the direction of the receiving sensor on monitor</li> </ul>
	<ul style="list-style-type: none"> <li>• Too far away or improper angle: The maximum effective distance between the remote controller and the receiving sensor is 15 feet and the angle is 30 degrees.</li> </ul>
	<ul style="list-style-type: none"> <li>• Obstacle: Move any obstacles out of the path</li> </ul>

### Dakota Micro, Inc.

8659 148th Ave. SE

Cayuga, ND 58013

[www.dakotamicro.com](http://www.dakotamicro.com)



Rear View Monitoring System

# User Manual

Part Number: DMOV-7M-C2



[www.dakotamicro.com](http://www.dakotamicro.com)

## FEATURES

- 7 inch LED backlit, high resolution TFT LCD
- Wide voltage input: 11-32V
- 3 Video Channel Inputs
- Manual or automatic image switching modes
- Forward/Mirror image selection
- Event Triggers provided for all 4 cameras. Cameras can be triggered for events such as backing up or applying the brakes
- Power is provided only to the active camera, prolonging the life of the cameras
- AV input and output jacks provided
- Auto ON/OFF LED sensor automatically triggers night vision when required
- Includes credit card style remote control
- Backlit control buttons enable easy menu navigation in all lighting conditions

## WARNINGS

- Please read entire manual before using our products
- Before you power your rear OverView system, ensure that all cables are properly connected to avoid damage to the system
- Monitor IS NOT WATERPROOF, please do not place the monitor outdoors
- Ensure that all cables are routed a sufficient distance from high temperature areas and rotary objects
- To ensure proper heat dispersal, ensure that vent holes in monitor remain clear
- Do not open the monitor or camera casing, doing so will void the warranty
- DO NOT watch DVDs etc. while driving
- Please do not use caustic chemicals to wipe the camera and/or monitor



### WARNINGS

The OverView camera system is intended for light use and is not intended to be utilized in harsh conditions such as high vibration, high moisture, and use in or around corrosive substances or other high impact or corrosive situations. Should a heavy duty camera be required for your application, an AgCam or EnduraCam camera from Dakota Micro should be utilized and is warranted for this type of use. Warranty will be void on this system should it be utilized outside of its recommended applications.

## LIMITED WARRANTY

Subject to the disclaimer, limitations and other directions stated hereafter, Dakota Micro, Inc. warrants that the Product will be free from defects in material and workmanship for periods as stated hereafter from the date of original purchase. **THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS. THE EXCLUSIVE REMEDY OF THE BUYER IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT. EXCEPT AS STATED IN THIS WARRANTY, DAKOTA MICRO SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY OF ANY OTHER LEGAL THEORY.** Any oral statements or representations made by anyone which are contrary to or at variance with the terms stated in this **LIMITED WARRANTY** are void.

Dakota Micro will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period of three (3) years for AgCam/EnduraCam cameras, two (2) years for AgCam/EnduraCam monitors, quads and wireless. Twelve Months (12) for all OverView Cameras & Monitors as well as all other cables and accessories.

The Dakota Micro limited warranty periods outlined above apply throughout the United States and Canada only. A one (1) year maximum limited warranty for all Products applies to all other geographic locations unless otherwise stated in writing by Dakota Micro.

This limited warranty does not apply to any issues connected with appearance that have no relation to the performance of the Product nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the process set forth on page 3 of this Policy, and provide proof of purchase to Dakota Micro, Inc. Neither the sales personnel of Dakota Micro nor any dealer or any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time periods described herein.

 
The warranties described herein shall be the sole and exclusive warranties and remedies provided by Dakota Micro. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Dakota Micro to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims. In no event shall Dakota Micro be liable or in any way responsible for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than Dakota Micro.

Some states do not allow the limitation on or exclusion of incidental or consequential damages, so said limitation may not apply to you.


Any action at law, suit in equity, or other judicial proceeding for the enforcement of any right provided for herein or otherwise, or with respect to any claim that a purchaser may have against Dakota Micro, Inc. shall be instituted only in the Courts of the State of North Dakota, either in the state district court located in Wahpeton, North Dakota or in Federal District Court location in Fargo, North Dakota. Without regard to conflicts of law principles, the laws of the state of North Dakota shall govern the interpretation and enforcement of the terms of this Limited Warranty and all aspects of the relationship between Dakota Micro and the purchaser.

*This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state*

## Included Components

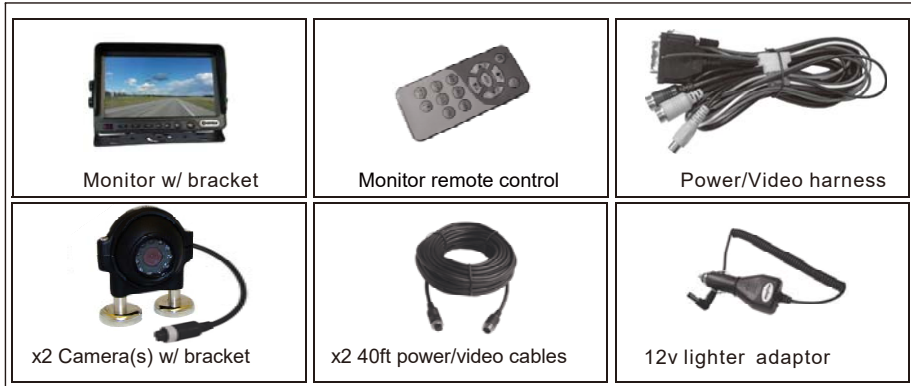

## Connection Chart

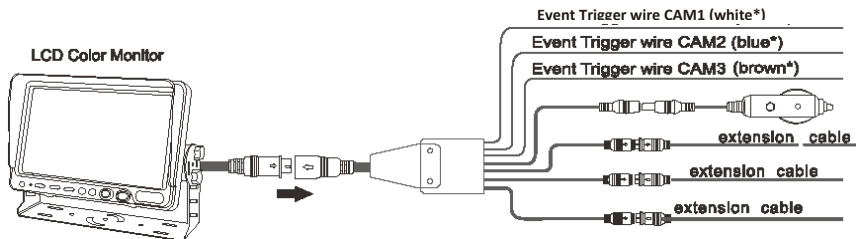 


- 1) Cameras 1-3 have an available event trigger wire. Cameras are identified as 1, 2 and 3  
 CAM1 - White connector  
 CAM2 - Blue connector  
 CAM3 - Brown connector

- 2) Regardless if monitor is ON or OFF, if power is applied to the trigger, activated camera will become powered

\* Event Trigger wire colors are subject to change without notice and may vary slightly from the colors indicated above.

## Monitor
 
### I. Monitor Introduction

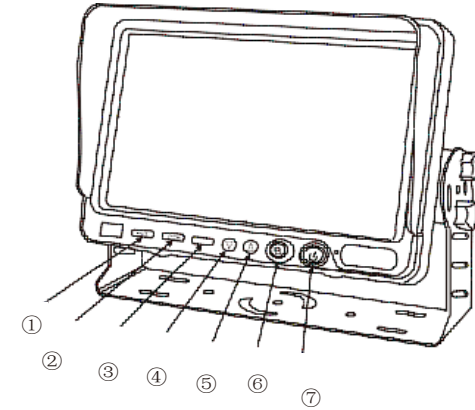

- ① Left/Vol -      ② Right/Vol +      ③ Menu      ④ Down/Cam Select  
 ⑤ Up/Cam Selection      ⑥ Quad View Mode Switch      ⑦ ON/OFF

### II. Specifications

Screen Size	7" (16:9) digital panel
Overall Size	185mm(W)x124mm(H)x48(D) without mounting bracket
Weight	400g
Power Input	AC 10.5-16.9V, 1,200 ma (2 cameras)
Color System	NTSC/PAL auto switch
Operating Temp	-4°F~122°F (-20°C~50°C)
Brightness	400cd/m <sup>2</sup>
Resolution	800(RGB) x 480
Contrast	500:1
Number of Camera Inputs	4

## Remote Control

### X. Button Function

#### MUTE

Press Mute to turn sound off, to resume volume, press Mute again or press VOL+.

#### POWER

Powers monitor ON and OFF.

#### CH button (up/down)

To select CH (Up) or CH (Down)

#### VOL-/+

- Adjust volume of monitor.
- Adjust brightness, contrast, etc.
- To activate other functions, such as, mirror/normal image switch, delay time adjustment, etc.

#### MENU

Displays monitor main menu.

#### MODE

User can use this key to select four mode s: standard color, soft color, rich color and bright.

#### CALL

Press t his button is to display currently displayed AV channel.

#### TIMR

Time setup of sleep off, it is used to set the time off within 120 minutes.

#### C/E/P

 
Language selection: Choice of Chinese or English.

#### AC1/AV2/AV3

Press this button to toggle between the 3 video inputs.


## Monitor

### VI. Monitor Operation

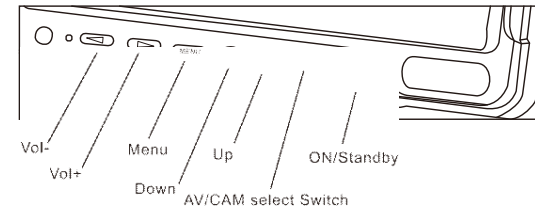

### VII. Monitor Menu Instructions

 
#### a. Picture

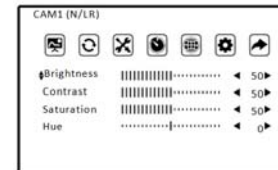

Default values for monitor brightness, contrast and saturation is 50. NTSC hue default is set to 0.

Brightness, contrast and saturation values can be adjusted from 0-100. Hue value can be adjusted between -50 to +50.


#### b. Channel Reverse Setup

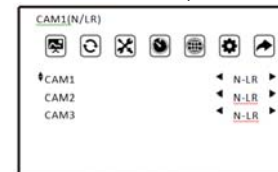 

Default values for picture mode is normal (N-LR). Each channel has 4 viewing modes available:

- LR (normal Image)
- M-LR (mirror image)
- M-UD (mirror upside down image)
- N-UD (normal upside down image)

#### c. Reverse Priority Setup

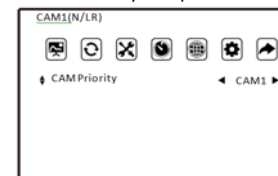 

The default reverse channel is CAM1. Default priority is set to: CAM1>CAM2>CAM3. Press the arrows to change priority between CAM1 and CAM2.

When CAM2 has reverse priority, order is set to: CAM2>CAM1>CAM3

When CAM3 has reverse priority, order is set to: CAM3>CAM1>CAM2


**IMPORTANT NOTE:** Keys do not work when system is in reverse.

## Monitor

 
### III. Installation of Power/Video Harness



### VII. Install/Remove Sun Shade

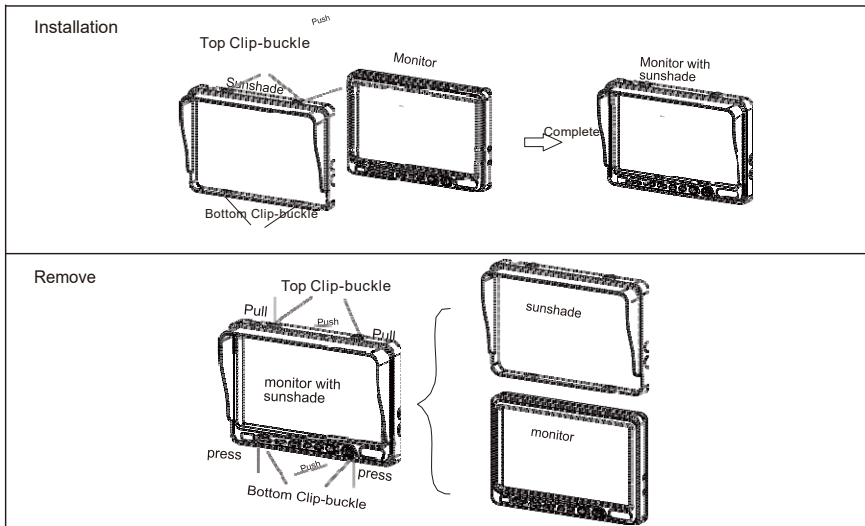


### V. Monitor Bracket Installation

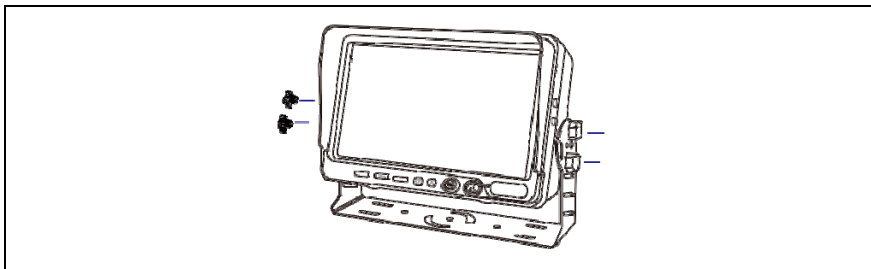 


3

## Camera

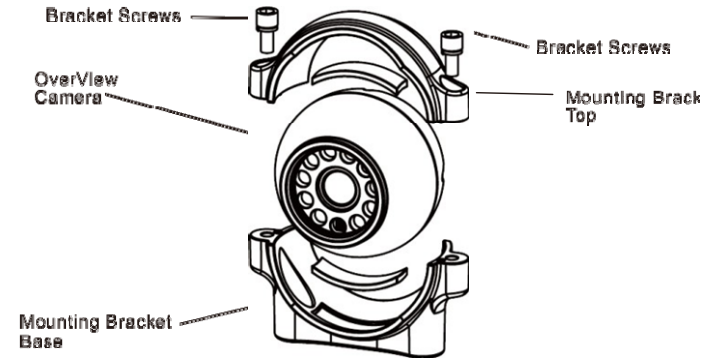 

### Camera Specifications

 
Video System	NTSC
Image Pick-up Device	Sharp 1/3" Color CCD
Horizontal Resolution	600 Horizontal lines
Minimum Illumination	0 LUX @ F2.0
Lenses Furnished	Board Lens 2.8mm
Synchronous System	Internal Synchronization
Operating Temp	-4°F~122°F (-20°C~50°C)
Power Supply	DC12v +/-10%
Waterproofing Criteria	IP68K
Dimensions	74mm(W) x 55.5mm(D) x 63.5mm(H)

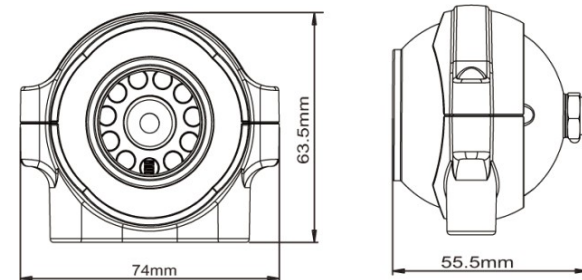

8

## Monitor

 
### d. T-DELAY setup:

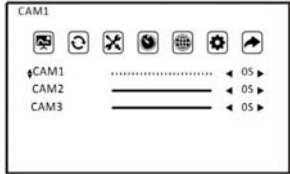

Default delay time for each CH is 0S (seconds). You can adjust the amount of delay time (how long the image remains on the screen after the triggered event stops) in the following increments: 0S, 5S, 10S, 15S, 20S, 25S or 30S


*NOTE: The "scan" key will not function when a trigger delay is activate*

### e. Language

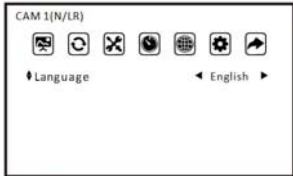 

The default language of the monitor is English. Alternative language options include: Chinese, French, Deutsch, Italian, Spanish, Portuguese, Russian Danish, Polish or Dutch.

### f. System Settings

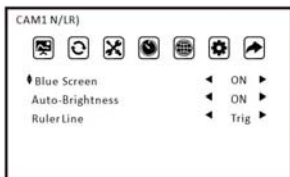 

#### Blue Screen


- ON:** Blue screen when no signal
- OFF:** Black screen when no signal

#### Auto-Brightness

- ON:** CDS sensor will test ambient light, if less than 10lux, screen brightness will automatically adjust and the key backlighting will turn on
- OFF:** CDS sensor will not function and key backlighting will not work

 
#### Ruler Ref Line Mode

- ON:** Reference line will always be displayed on video image
- TRIG:** Reference line will only be displayed when triggered
- OFF:** Reference line will never be displayed

 Exit menu and save the settings

## Remote Control

### VIII. Remote Introduction

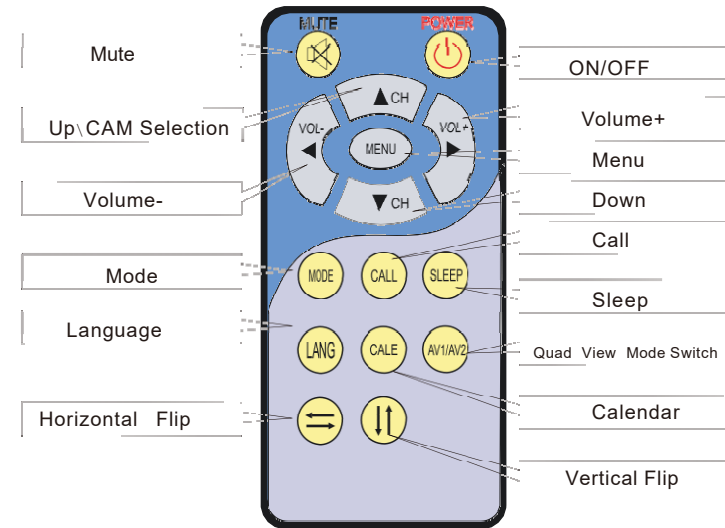

### IX. Replacing the Battery in your remote

