



User Manual DM-4DTM-M


AgCam®/EnduraCam®/RazerCam™ Camera mates to DTM Female



Important - Read prior to operating equipment: Compatible cameras, monitors, and cabling have been tested and are verified to work with the specifications provided below. There may be other applications in which these parts and their connectors have not been verified by Dakota Micro. In those instances, it is the user's responsibility to verify the equipment's video capability, video format, and compatible wiring connectivity. Please follow all safety signs and precautions.

Cable Connectors

- A. EN3 5-socket female (to Camera)
- B. DTM 4-position male (to Monitor)

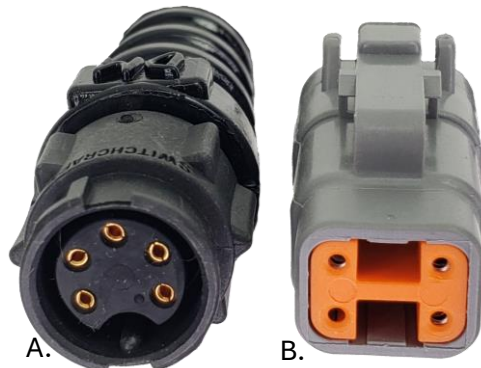

Installation Instructions

- Open the back tailgate of the skidsteer and locate the camera connection ports. *
- Plug in Part A to the camera cable.
- Plug in Part B to the monitor.

**See your equipment's user manual for exact locations of camera connection ports.

****All product specifications and warranty details are available at www.dakotamicro.com****