








## AGCO (Massey, Challenger & Gleaner) Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<p><b>AGCO Global Cabs pre-wired using NT01 or Tyton Monitor for video display</b></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1-2</p>		 <p>AgCam PN: AC-FDT01 (1 per camera)</p>  <p>AgCam PN: BCOMB-4C</p>	<p>None</p>
<p><b>AGCO Global Cabs pre-wired with AgCam monitor for video display</b></p>	<p>Analog &amp; AHD Video Capable</p>	<p>NTSC/PAL</p>	<p>1-4</p>		 <p>AgCam PN: BCOMB-4C</p>	<p>None</p>
<p><b>AGCO Combines pre-wired with video ready C2100 Console 2012 or newer Challenger, Massey &amp; Gleaner Combines</b></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>PAL</p>	<p>1-2</p>	<p><b><u>2 Adaptor Cables required:</u></b></p> <p>PN: BUSB1 – Connects to a mating connector inside of the headrest</p> <p>PN: BCOMB4C – Connects to a mating connector outside and under the cab, above the feeder housing</p>	 <p>AgCam PN: BUSB1</p>  <p>AgCam PN: BCOMB-4C</p>	<p>None</p>





## AGCO (Massey, Challenger & Gleaner) Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>C2100 Console</b> <b>C3000 Console</b> <i>(All Others)</i>	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1-2		 <a href="#">AgCam PN: BUSB1-TC</a>	Not compatible due to video format
<b>C2000 Console 2</b> 2009-2015 Challenger 2009-2015 Massey 2009-2015 Gleaner <i>(ALL "U" Serial Numbers)</i>	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1-2		 <a href="#">AgCam PN: AC-A2C</a>	Not compatible due to video format
<b>C1000</b> Model Year 2010-2015 MF 8600 Series AGCO DT-B Series Challenger C-series	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1		 <a href="#">AgCam PN: AC-A1C</a>	Not compatible due to video format
<b>GTA/Console 1</b> Massey 6400/7400/8400 AGCO DTA/RTA Challenger B-Series 500/600	Video Enabled Models ONLY <i>(check back of monitor for video input)</i>	PAL	1		Adaptor cable no longer available - OBSOLETE	Not compatible due to video format

## AgLeader Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>InCommand 800 &amp; 1200</b>	Analog Video Capable <b>Not able to display AHD</b>	PAL/NTSC	1-4	 <i>*Monitor does not have on board mirroring capability. Use Elite AgCam for this function</i>	AgLeader 4 camera cable PN: 4004494-12 AgLeader 2 Camera cable PN: 4004493-12	 AgLeader PN <b>AND</b> Dakota Micro PN: DMAC-OVC (this adaptor cable is only for a single camera, if you want to hook up 4 cameras, you will need 4 of these)
<b>Versa Integra</b>	Analog Video Capable <b>Not able to display AHD</b>	PAL/NTSC	1-4		 AgCam PN: DMAC-ALI	 OverView PN: DMOV-ALI
<b>InSight Edge Compass</b>	<u>NOT</u> Video Capable	N/A	NONE	N/A	<b>Not Available</b>	<b>Not Available</b>



### ASA (Audiovox) Monitors

Device Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
Voyager and ToughCam Monitor	Analog Video Capable <b>Not able to display AHD</b>	NTSC/PAL	1-4		 AgCam PN: DMAC-ADVX-M	 OverView PN: DMOV-ADVX-M
Voyager and ToughCam Camera to AgCam or EnduraCam monitor	Analog Video Capable <b>Not able to display AHD</b>	NTSC/PAL	1-4		 AgCam PN: DMAC-ADXC	Not Available




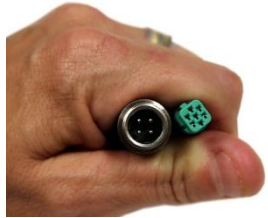


### A&I (CabCam) Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
CabCam Camera	Analog Video Capable <b>Not able to display AHD</b>	NTSC	1-4		 AgCam PN: DMAC-OVC	None required, same connectors
CabCam Monitor	Analog Video Capable <b>Not able to display AHD</b>	NTSC	1-4		 AgCam PN: DMAC-OVM	None required, same connectors



### CAT WAVS (Orlaco) Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
Pre-wired CAT equipment with WAVS (Orlaco) Monitors	Analog Video Capable  <b>Not able to display AHD</b>	NTSC	1-4		 AgCam PN: DMAC-CAT1	 OverView PN: DMOV-CAT1





### CNH (Case & New Holland) Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
New Holland CR Combines	Analog Video Capable  <b>Not able to display AHD</b>	NTSC/PAL	1-3	See Combine Manual for camera hookup locations	 AgCam PN: DMAC-JD6R	 OverView PN: DMOV-JD6R
CNH 2014 Prewired Combines	Analog Video Capable  <b>Not able to display AHD</b>	NTSC/PAL	1-3	<b>Camera 1 &amp; 2 Connection:</b> located beneath the front, ladder side shield, below the grain tank, just inside the frame  <b>Camera 3 Connection:</b> located under the mounting plate of the GPS receiver inside the hopper	 AgCam PN: DMAC-CNH1F	 OverView PN: DMOV-CNH1F
AFS 200 AFS Pro 700 AFS Pro 300 NH IntelliView II & III (NH IntelliView Plus II <u>NOT</u> video Capable)	Analog Video Capable  <b>Not able to display AHD</b>	NTSC/PAL	1	Single camera adaptor plugs directly into BNC plug on rear of monitor	 AgCam PN: DMAC-CNH1	 OverView PN: DMOV-CNH1



### CNH (Case & New Holland) Monitors

<p><b>AFS 200</b>  <b>AFS Pro 700</b>  <b>AFS Pro 300</b>  <b>NH IntelliView II &amp; III</b>  <i>(AFS Pro 600 <u>NOT</u> video capable)</i></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1-3</p>	<p><b>Camera 1 Connection:</b> Plugs directly into BNC plug on rear of monitor</p> <p><b>Camera 2 &amp; 3 Connection:</b> Hardwire directly into bulkhead connection</p>	 <p>AgCam PN: DMAC-CNH3</p>	 <p>OverView PN: DMOV-CNH3</p>
--	---	-----------------	------------	--	--	---

### Dakota Micro Inc. Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<p><b>AgCam</b>                      7, 9" or 9" Quad Monitor</p>	<p>Analog &amp; AHD Video Capable</p>	<p>NTSC/PAL</p>	<p>1-4</p>		<p>None required, same connectors</p>	 <p>OverView PN: DMAC-OVC</p>
<p><b>OverView</b>                      7" or 7" Quad monitor  <i>(Same connectors as CabCam)</i></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1-4</p>		 <p>AgCam PN: DMAC-OVM</p>	<p>None required, same connectors</p>


### DICKEY-john Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
IntelliAg 10" VT	Analog Video Capable <b>Not able to display AHD</b>	PAL	1-2		 AgCam PN: AC-A2C	Not compatible due to video format




### Fendt Monitors

Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
AGCO Global Cabs with NT01 or Tyton Monitor Or VarioTerminal 10.4" Tier 4i 700, 800 & 900 Series <i>(10.4" standard, 7" below is optional on this series tractor)</i>	Analog Video Capable <b>Not able to display AHD</b>	NTSC/PAL	1-2		 AgCam PN: AC-FDT01	Not compatible due to video format
VarioTerminal VarioTerminal 7" VarioTerminal 5"	<u>NOT</u> Video Capable	None	N/A	N/A	Not Video Capable	Not Video Capable

## Kuhn/Spudnik Monitors











Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
CCI100	Analog Video Capable <b>Not able to display AHD</b>	NTSC/PAL	1		Adaptor cable no longer available - OBSOLETE	Not Available


## John Deere Monitors






Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
John Deere S-Series Combines, Cotton Pickers & Sprayers	Analog Video Capable <b>Not able to display AHD</b>	NTSC/PAL	1-2	See JD equipment users manual for locations	 AgCam PN: AC-FDT01	Not Available
Generation 4 Command Center - 4600 w/ Touch Screen	Analog Video Capable <b>Not able to display AHD</b>	NTSC/PAL	4	Hookups located outside the cab, see JD equipment users manual for locations	 AgCam PN: DMAC-JDCOC	 OverView PN: DMOV-JDCOC






## John Deere Monitors


<p><b>GreenStar 3 2630</b></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1-3</p>		 <p>AgCam PN: DMAC-JD3C</p>	 <p>OverView PN: DMOV-JD3C</p>
<p><b>John Deere Command View II Cab</b> <i>Equipped with GreenStar 3 2630 Monitors</i></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1-3</p>	<p>Hookups located outside the cab, see JD equipment users manual for locations</p>	 <p>AgCam PN: DMAC-JD2COC</p>	 <p>OverView PN: DMOV-JD2COC</p>
<p><b>GreenStar 3 Command Center w/ Touch Screen</b></p>	<p>Analog Video Capable (<b>Touch screen ONLY!</b>)</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1</p>		 <p>AgCam PN: DMAC-JDCOC</p>	 <p>OverView PN: DMOV-JDCOC</p>
<p><b>Pre-wired John Deere R Series Tractors &amp; S Series Combines</b> <i>Premium Cabs ONLY</i></p>	<p>Analog Video Capable</p> <p><b>Not able to display AHD</b></p>	<p>NTSC/PAL</p>	<p>1</p>	<p>Hookup located inside the cab, behind seat</p>	 <p>AgCam PN: DMAC-JD6R</p>	 <p>OverView PN: DMOV-JD6R</p>
<p><b>GreenStar 2 1800</b> <b>GreenStar 2 2600</b></p>	<p><u>NOT</u> Video Capable</p>	<p>N/A</p>	<p>N/A</p>	<p>N/A</p>	<p><b>Not Video Capable</b></p>	<p><b>Not Video Capable</b></p>



Lexion/Class Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Lexion Combine, Claas 780-670 Choppers, Jaguar 930-980 and 880-840</b>  <b>With pre installed ProfiCam Monitor</b>	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1	Varies	 AgCam PN: DMAC-CLS	Not compatible due to video format
<b>Cebis</b>	<u>NOT</u> Video Capable	N/A	NONE	N/A	Not Video Capable	Not Video Capable


Misc. Devices						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Television/VCR</b>	Video Capable  Analog or AHD depends upon model	NTSC/PAL (depends upon model)	Varies		 AgCam PN: DMAC-TVA	Not Available
<b>Computer</b>	Video Capable  Analog or AHD depends upon model	NTSC/PAL	Varies		 AgCam PN: DMAC-2USB	Not Available
<b>DVR (short distances)</b>	Video Capable  Analog or AHD depends upon model	NTSC/PAL	Varies		 AgCam PN: DMAC-CNH1	Not Available



Misc. Devices						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Surveillance System</b> <i>(Security system camera into DM system)</i>	Video Capable  Analog or AHD depends upon model	NTSC/PAL	Varies	Misc.	 AgCam PN: DMAC-SCA	Not Available
<b>Surveillance System</b> <i>(DM Camera into existing security system)</i>	Video Capable  Analog or AHD depends upon model	NTSC/PAL	Varies	Misc.	 AgCam PN: DMAC-SSA	Not Available

Motec Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Motec Camera</b> (allows for an AgCam monitor to be used with a Motec camera)	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1-4		 AgCam PN: DMAC-MTC	Not Available
<b>Motec Monitor</b> (allows for an AgCam camera to be input into a Motec Monitor)	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1-4		 AgCam PN: DMAC-MTM	Not Available

Mueller Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Basic Terminal</b> <b>Comfort Terminal</b> <b>Track Guide II</b> <b>GuideME</b> w/ installed GSM modem	Analog Video Capable  <b>Not able to display AHD</b>	PAL	2		Adaptor cable no longer available - OBSOLETE	Not Available



Outback/AgJunction (Formerly Hemisphere GPS) Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Outback Max</b>	Analog Video Capable  <b>Not able to display AHD</b>	NTSC/PAL	4		Cable Sold by Hemisphere, Adaptor Cable PN: 051-0285-000	Outback Adaptor cable + OverView conversion cable: PN: DMAC-OVC
<b>Outback STs</b> <b>Outback S3</b> <b>Outback S-LITE</b>	<u>NOT</u> Video Capable	N/A	NONE		Not Video Capable	Not Video Capable

Raven Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Raven Viper 4</b>	Analog Video Capable  <b>Not able to display AHD</b>	NTSC/PAL	1-4		Cable sold by Raven Adaptor Cable PN: <b><u>11150172077</u></b>	Raven Adaptor cable + OverView conversion cable: PN: DMAC-OVC

TeeJet Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>Matrix 570G</b> <b>Matrix 840G</b>	Analog Video Capable  <b>Not able to display AHD</b>	PAL/NTSC	Unk		None required, same connectors	 OverView PN: DMAC-OVC

TOPCON Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
<b>X20</b>	Analog Video Capable  <b>Not able to display AHD</b>	PAL	1-4		 AgCam PN: DMAC-USB1-TC	Not compatible due to video format
<b>X30</b>	Analog Video Capable (requires unlock Key) Not able to display AHD	PAL/NTSC	1-2		 AgCam PN: DMAC-USB1-TC	Not compatible due to video format

Trimble Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
AgGPS FmX/FM1000	Analog Video Capable <b>Not able to display AHD</b>	PAL/NTSC	1-4		 AgCam PN: DMAC-TRMBL-FMX	 OverView PN: DMOV-TRMBL-FMX
CFX-750	Analog Video Capable <b>Not able to display AHD</b>	PAL/NTSC	1-2		 AgCam PN: DMAC-TRMBL-FMX	 OverView PN: DMOV-TRMBL-FMX
TMX-2050	Analog Video Capable <b>Not able to display AHD</b>	NTSC	1-2		EXP-100 Kit Available ONLY through Trimble dealers PN: <b>101990-01</b> PLUS AgCam PN: DMAC-TRMBL-FMX	EXP-100 Kit PLUS  OverView PN: DMAC-OVC
AgGPS Field Manager EZ Guide	<u>NOT</u> Video Capable	N/A	NONE	N/A	Not Video Capable	Not Video Capable

Versatile Monitors						
Monitor Type	Video Capability	Video Format	# of Video Inputs	Monitor Photo or Hookup info	AgCam Adaptor	OverView Adaptor
Versatile Display Monitor	Analog Video Capable <b>Not able to display AHD</b>	PAL	1		 AgCam PN: VER-WAC11	Not compatible due to video format