

User Manual

AGCO AgCam® 9" AHD Quad Monitor Kit

<u>Dakota Micro Part Number:</u>
AG-H9QDTM2
ACX308490A





Table of Contents

I.	Standard Features	3
II.	Important Information About Analog & AHD	3
III.	Parts of an AgCam	4
IV.	Camera Mounting	4
V.	Cable Routing Tips & Warnings	5
VI.	Monitor & Remote Operations	6-7
	A. Monitor Operations	
	B. Remote Operations	
VII.	Menu Settings	8-9
VIII.	Specifications	10
IX.	Warnings	10
Х.	Product Warranty/Repair Process	11
XI.	Consumer Limited Warranty	12
XII.	Disclaimer	12
XIII.	Contact Us	12

Thank you for purchasing equipment from Dakota Micro, Inc.

Always read the manual prior to operating this equipment. Also, please follow all safety signs and precautions.

See the Dakota Micro, Inc. website for installation training videos at www.dakotamicro.com.

Author: MES Revised by: MES Rev: 09/07/21 Page 1 of 12



PAGE INTENTIONALLY LEFT BLANK

Author: MES Revised by: MES Rev: 09/07/21 Page 2 of 12



I. STANDARD FEATURES

A. Cameras

- True HD Resolution (720P)
- Made in the USA with US and Global Components
- 3 Year Warranty
- 3 way programmability Video System (NTSC or PAL), Video Output Type (AHD or Analog) and Mirroring
- 16:9 aspect ratio so image doesn't need to be "stretched" to match monitors
- Improved color and clarity over standard analog video cameras
- Increased ability to interpret shadowed areas, allowing for a larger viewing area
- IP69 Anodized Aluminum camera body Waterproof, shockproof, and suitable for nearly any use.
- Built-in, high quality CCD camera with high performance IR's
- IR has effective range of 75'+ in complete darkness, resists blooming and back reflection
- Our exclusive camera body lens darkens in bright conditions and becomes completely transparent under low light conditions. This lens is also transparent of infrared light, allowing the LED's to penetrate even when it is darkened
- Solid billeted aluminum camera body featured Dakota Micro's proprietary triple o-ring seal making the 100% waterproof even under direct high pressure spray and underwater use
- Triple hardened glass lens resists scratching, scuffing and static buildup
- Anodized camera body resists corrosion even in the harshest environments
- Standard camera lens features a 92° horizontal field of view.
- Optional lenses available for a narrower viewing angle, giving the option to view subjects further away. Optional cameras can view the following Field of View: 46°, 21°, and 15°.
- Removable/replaceable camera tail for easy replacement

B. Monitors

- Feature the latest in Analog HD technology
- View 1, 2, 3 or 4 cameras at the same time
- LED backlit
- Compatible with NTSC or PAL cameras, simultaneously
- Compatible with AHD or CVBS cameras, simultaneously
- Advanced LCD technology allows you to clearly see your image from any angle
- Mirror the view of any of your cameras for use as a backup camera
- 2 Year Warranty
- 16:9 aspect ratio
- 4 Camera Inputs
- Available in 9in size
- Event triggers for each camera allow for triggered events to bring your camera to full view (IE: putting the vehicle in reverse)
- Color, brightness, contrast, and volume controls that allow compensation for use in different environments
- · Remote control, sun shield, and metal U-bracket monitor stand included

C. Cables

- Made in the USA
- Silicone jacketing resists heat, cold, compression & crimping
- Gold plated, corrosion resistant pins
- Watertight connections
- ¼ twist lock keeps cables securely locked together
- Our durable power/video extension cables come in 10ft, 20ft, 30ft, 40ft, 50ft, 60ft & 80ft lengths and feature sturdy, watertight connectors


II. IMPORTANT INFORMATION ABOUT ANALOG & AHD

For multi-camera systems, all cameras can be either AHD or Analog, simultaneously

Author: MES Revised by: MES Rev: 09/07/21 Page 3 of 12



III. PARTS OF AN AGCAM (Part Number: AG-LCP)

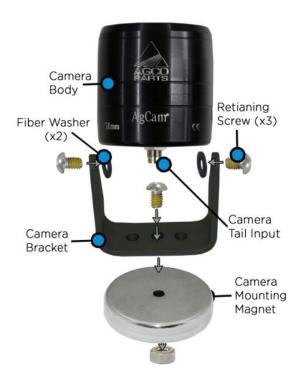

IV. CAMERA MOUNTING

After camera is securely mounted, plug the camera pigtail into rear of AgCam® / EnduraCam camera. You can now plug the remaining end of the pigtail into your power/video extension cable. Make sure the extension cables are securely attached and locked (¼ turn will lock the cables together).

A. Temporary Mounting

o For temporary mounting, it is recommended that you use the supplied 65# pull magnet. If using magnetic mount, fasten camera cable with a zip tie or other style fastener. This will act as a "safety wire" in the event your camera is knocked loose for some reason. When selecting a location, make sure that the equipment surface is clean of all foreign material and as flat as possible to ensure that the magnetic camera base will have good contact and not vibrate off. The thicker the metal base, the more securely your magnet will hold.

B. Permanent Mounting

For permanent mounting, it is recommended that you remove the magnet and attach the camera bracket to any solid surface with two (2) screws.

C. Suggestions for Camera Mounting

- When determining the location for the camera, it is always best to use a solid surface to minimize vibration.
- Important- Ladders are not good mounting choices due to lack of stability.

If you will be using your AgCam® for assisting in visibility for towing, you will want to position the camera so you can see the desired area and a portion of the vehicle/trailer in tow; this will give you some reference to distance.

WARNING:

A. <u>NEVER RELY ON YOUR AGCAM® AS A SAFETY FEATURE.</u>

It is up to your discretion to keep your road travel and other operations safe. Your AgCam® will provide you with information only based on what it sees. Operation of machinery safety guidelines still apply.

Author: MES Revised by: MES Rev: 09/07/21 Page 4 of 12



V. CABLE ROUTING TIPS & WARNINGS

There are two (2) lengths of cable that come standard with our AgCam® camera kits: One (1) 20' and one (1) 60'. Extra cables in varying lengths available for purchase through your local AgCam® dealer.

- **A.** Cable routing is important; where you choose to run the cables should not interfere with the normal operation of the machine or any safety equipment.
- **B.** ALWAYS be aware of any "pinch points" or other potential hazards to the cable(s).
- **C.** Secure all cables to vehicle/equipment using cable clips, zip ties or other style fasteners.
- **D.** If you intend to use your AgCam® for short length PTO operated implement, avoid excess cable lengths, if possible. When you decide on a location, you should fix the camera to a permanent bracket using ¼ inch bolts and attach any loose cable securely so there is no chance of entanglement in the PTO or other moving parts.
- **E.** If you use your AgCam® to monitor a combine hopper or other combine operations, take care to remember that combines have many moving parts. Use extreme care when routing cables, and it is strongly recommended that you use bolts to secure the camera. While it would be sufficient to use the magnetic base for monitoring purposes during road travel, it is advised to secure the camera with bolts during operation of the combine.

Author: MES Revised by: MES Rev: 09/07/21 Page 5 of 12



VI. MONITOR & REMOTE OPERATIONS

A. Monitor Operations





lt			
lt			
lt			
ew. Second			
viewing			
screen			
Display			
/ In MENU			
Port 10 and 11 is located on the back side of the monitor			

Author: MES Revised by: MES Rev: 09/07/21 Page 6 of 12



B. Remote Operations

Standard Remote

Standard Remote		
	POWER ON (give it a few seconds) / OFF	
MODE	Switches between video channels	
MENU	Displays Menu	
	Navigation Arrows	
CHT	Brings Channel 1/Camera 1 Full screen	
CH2	Brings Channel 2/Camera 2 Full screen	
СНЗ	Brings Channel 3/Camera 3 Full screen	
CH4	Brings Channel 4/Camera 4 Full screen	



Author: MES Revised by: MES Rev: 09/07/21 Page 7 of 12



VII. MENU SETTINGS

A. Monitor Menu Settings

- 1. Press the MENU key on the face of monitor or remote. MENU key also acts as "enter" key once within menu.
- 2. Use the AV key on the monitor (up and down arrows on remote) to select an item under each section. Selected menu items turn blue.
- 3. Use or + on the monitor (left and right arrows on remote) to change the value of the highlighted item.
- 4. To exit: Press the MENU button monitor (left or right arrow on remote) multiple times until the menu goes away. Allow monitor to time out (approximately 10 seconds).




MAIN MENU

Display:Adjusts monitor display settingsSystem:System Settings including time setup



Installation Mode (pictured below)

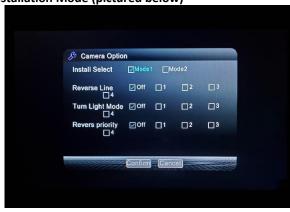

DISPLAY SETTING

DISPLAY ADJUSTMENT: When utilizing microphone, allows for noise

reduction settings

Scene Mode: Adjusts look of entire display – highlight, film,

brilliance, cool, warm, custom. Adjustment of

brightness, contrast, saturation & hue of

chosen scene also available

Image Adjust: Allows adjustment of individual cameras –

brightness, contrast, saturation, hue. You can

also individually flip each camera.

LOOP PREVIEW: Set auto rotation time between screen views—

OFF, 3, 5, 8, 10 or 15 seconds

POWER ON MODE: Select the default camera view when you

power on. Select from cameras: 1, 2, 3, 4, ½, ¾,

H, and Quad

INSTALLATION MODE: Choose from more default camera view

options.

Install Select: Mode 1 is regular screen view and Mode 2 flips

screen upside down.

Reverse Line: Check the boxes of which cameras (or none)

you'd like to view the reverse guidelines. Note,

reverse lines can only be displayed in full

screen one at a time.

Turn Light Mode: N/A

Reverse Priority: Select which single camera overrides any other

trigger event when reversing

AUTO DIMMER: Mark "On" if you want the monitor to

automatically dim in low-light conditions

Author: MES Revised by: MES Rev: 09/07/21 Page 8 of 12



Display Mode (pictured below)



DISPLAY MODE: Allows adjustment of how cameras are

displayed on screen as well as background &

border colors



SYSTEM SETTING

LANGUAGE SETTING: Select Language

POWER SAVING MODE: Set Power Saving Mode duration – Off, 10min,

30min, 1 hr, 2 hr.

RESTORE FACTORY: Restore monitor to factory settings

SYSTEM UPGRADE: Install firmware updates (SD card would need to be supplied by manufacturer to update;

updates generally not needed)

Author: MES Revised by: MES Rev: 09/07/21 Page 9 of 12



VIII. SPECIFICATIONS

B. LCD Monitor			
Screen Size	16:9 digital panel		
Overall Size	9.25in(L)x 6.1in(H)x1.44in(D) 235mm(L)X155mm(H)X36.5mm(D)		
Weight	30.4oz (862g)		
Power Input	DC 12v-24v		
Color System	NTSC/PAL auto switch		
Operating Temp.	-30°F~130°F (-34°C~+54°C)		
Brightness	350cd/m ²		
Resolution (HxV)	1024(H)x600(V)		
Contrast	500:1		
Viewing Angle	L/R: 70° Up: 50° Down: 70°		
Operating Voltage	Min. 12v (Check monitor label for specific voltage range)		
Lighting Source	LED Backlit		
Environmental Rating	IP50		
Video Output Format	Full/Quad/split/ Auto Switch		
Video Output Port	RCAx1 Video Out - Analog (CVBS) ONLY		
Video Input Port	X4 AHD video input channels		

IX. WARNINGS

- When selecting a camera system from Dakota Micro, be sure to utilize the appropriate system for your use. AgCam and EnduraCam cameras are designed for high impact, moisture, vibration, and a variety of other rough conditions. OverView cameras and kit components are designed for light use, low vibration, and low moisture. OverView equipment is not warranted when used in situations outside of the above-mentioned parameters. We always request that customers keep in mind that our less expensive OverView product line is cheaper because it does not feature the reliability and durability of our AgCam and EnduraCam lines. The warranty available on these products reflects that durability.
- To avoid electrical shock and maintain optimal functionality, do not open the enclosures. High voltage may be present and there are no user serviceable parts inside. All warranties will be void should any enclosures be tampered with in any way.
- Do not use any harsh chemical solvents, cleaning agents or corrosive detergent to clean away dirt on the surface of the screen or lens.
- On AgCam and EnduraCam products, the photo-chromic camera lenses have been made impact-resistant and have been
 drop-ball tested according to Sec. 3.84,21 CRF BUT ARE NOT UNBREAKABLE. Because they have been hardened chemically,
 they show no stress pattern. Inspect your lenses frequently. Chipped or scratched surfaces will reduce protection. Such
 lenses should be replaced only by the manufacturer.
- Power to cameras is not interrupted by turning off monitor; 12v power source must be terminated when not in use to avoid battery drain. To avoid this problem be sure when hard wiring a unit, use a 5-amp fused circuit.
- Do not use your Dakota Micro camera system for anything other than legal surveillance and observation uses. Dakota Micro, Inc. is not liable for any illegal or nefarious usage.

Author: MES Revised by: MES Rev: 09/07/21 Page 10 of 12



X. PRODUCT WARRANTY/REPAIR PROCESS

- 1. For Technical Support call 1 701-538-4403 OR email techsupport@dakotamicro.com
- 2. Technician will assist in troubleshooting product malfunction.
- 3. If product malfunction cannot be remedied and a repair is deemed necessary, Technician will issue a Repair Authorization (RA) number.

IMPORTANT NOTE:

The Technician will note on the RA form if the repair APPEARS to be a warranty or non-warranty issue based on customer description of the issues at hand. No final determination can be made until inspection and testing of the equipment is completed at the factory.

- 4. To ensure fast and effective repairs, customer is required to send:
 - Dakota Micro Product that Technician has requested/deemed necessary in the proper diagnosis and repair of malfunction. This may include some or all components of the kit.
 - Original/Copy of purchase receipt.
 - For serialized items ONLY, If a copy of the original purchase receipt cannot be provided, then DAKOTA MICRO will use the product manufacture date.
 - Customer information, including return address & phone number. If the phone number is not included, the customer will be sent a letter requesting the needed information.
 - RA Number provided by Dakota Micro Technical Support
 - Shipping and associated costs to ship product to DM factory to be borne by the customer unless otherwise specified.
- 5. Customer should mail product to:

Dakota Micro, Inc.

RA#XXXXX

8659 148 ½ Ave. SE

Cayuga, ND 58013

- 6. Upon receipt and evaluation of product at Dakota Micro Factory, it will be established if the repair is warranty or non-warranty. If requested, customer will be called and notified of any applicable charges.
- 7. If the repairs are deemed non-warranty and require a service/repair fee of any kind, a credit card number will be requested by Order Processing after the repair is completed.
- 8. If customer is unable to be contacted over the course of 3 weeks regarding required non-warranty repairs, product will be returned, unrepaired, to the customer.
- 9. Any product returned without proper documentation may be returned at customer's expense.
- 10. Product returned with unconfirmed problems will be assessed a \$60 evaluation fee per unit
- 11. Return shipping costs will be borne by the party at fault; in other words, if Dakota Micro determines that the defective product was covered under warranty, Dakota Micro pays the shipping charges. If Dakota Micro determines that it was the customers fault, the customer will pay shipping charges. If a circumstance cannot be determined than the cost of shipping charges will be decided on a discretionary basis depending on the situation at hand.

Author: MES Revised by: MES Rev: 09/07/21 Page 11 of 12



XI. CONSUMER LIMITED WARRANTY

LIMITED WARRANTY

Subject to the disclaimer, limitations and other directions stated hereafter, Dakota Micro, Inc. warrants that the Product will be free from defects in material and workmanship for periods as stated hereafter from the date of original purchase. THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS. THE EXCLUSIVE REMEDY OF THE BUYER IS LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT. EXCEPT AS STATED IN THIS WARRANTY, DAKOTA MICRO SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY, NEGLIGENCE, STRICT LIABILITY OF ANY OTHER LEGAL THEORY. Any oral statements or representations made by anyone which are contrary to or at variance with the terms stated in this LIMITED WARRANTY are void.

Dakota Micro will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period of three (3) years for AgCam® /EnduraCam® and InnoPro® cameras; two (2) years for AgCam® / EnduraCam® monitors, and Wireless components; Twelve Months (12) for all Overview Cameras & Monitors, cables and all other accessories.

The Dakota Micro limited warranty periods outlined above apply throughout the United States and Canada only. A one (1) year maximum limited warranty for all Products applies to all other geographic locations unless otherwise stated in writing by Dakota Micro.

This limited warranty does not apply to any issues connected with appearance that have no relation to the performance of the Product nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth in the complete Dakota Micro "Warranty & Repair Policy" listed on page 11 - section XVI, and provide proof of purchase to Dakota Micro.

Neither the sales personnel of Dakota Micro nor any dealer or any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time periods described herein.

The warranties described herein shall be the sole and exclusive warranties and remedies provided by Dakota Micro. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Dakota Micro to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims. In no event shall Dakota Micro be liable or in any way responsible for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than Dakota Micro.

Some states do not allow the limitation or exclusion of incidental or consequential damages, so said limitation may not apply to you.

Any action at law, suit in equity, or other judicial proceeding for the enforcement of any right provided for herein or otherwise, or with respect to any claim that a purchaser may have against Dakota Micro shall be instituted only in the Courts of the State of North Dakota, either in the state district court located in Wahpeton, North Dakota or in Federal District Court location in Fargo, North Dakota. Without regard to conflicts of law principles, the laws of the state of North Dakota shall govern the interpretation and enforcement of the terms of this Limited Warranty and all aspects of the relationship between Dakota Micro and the purchaser.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

XII. <u>DISCLAIMER</u>

Dakota Micro Inc. products, specifications, pricing and programs are subject to change without prior notice. Dakota Micro Inc. reserves the right to make design changes at any time without obligation to retroactively install them on previously sold units.

XIII. <u>CONTACT US</u>

DAKOTA MICRO

Cayuga, ND 58013

Management System Registered to ISO 9001

www.dakotamicro.com

Author: MES Revised by: MES Rev: 09/07/21 Page 12 of 12